


# THE PROCESS

## HOW TO CONNECT PVC TO POLY PIPE

CATEGORY: GARDENING

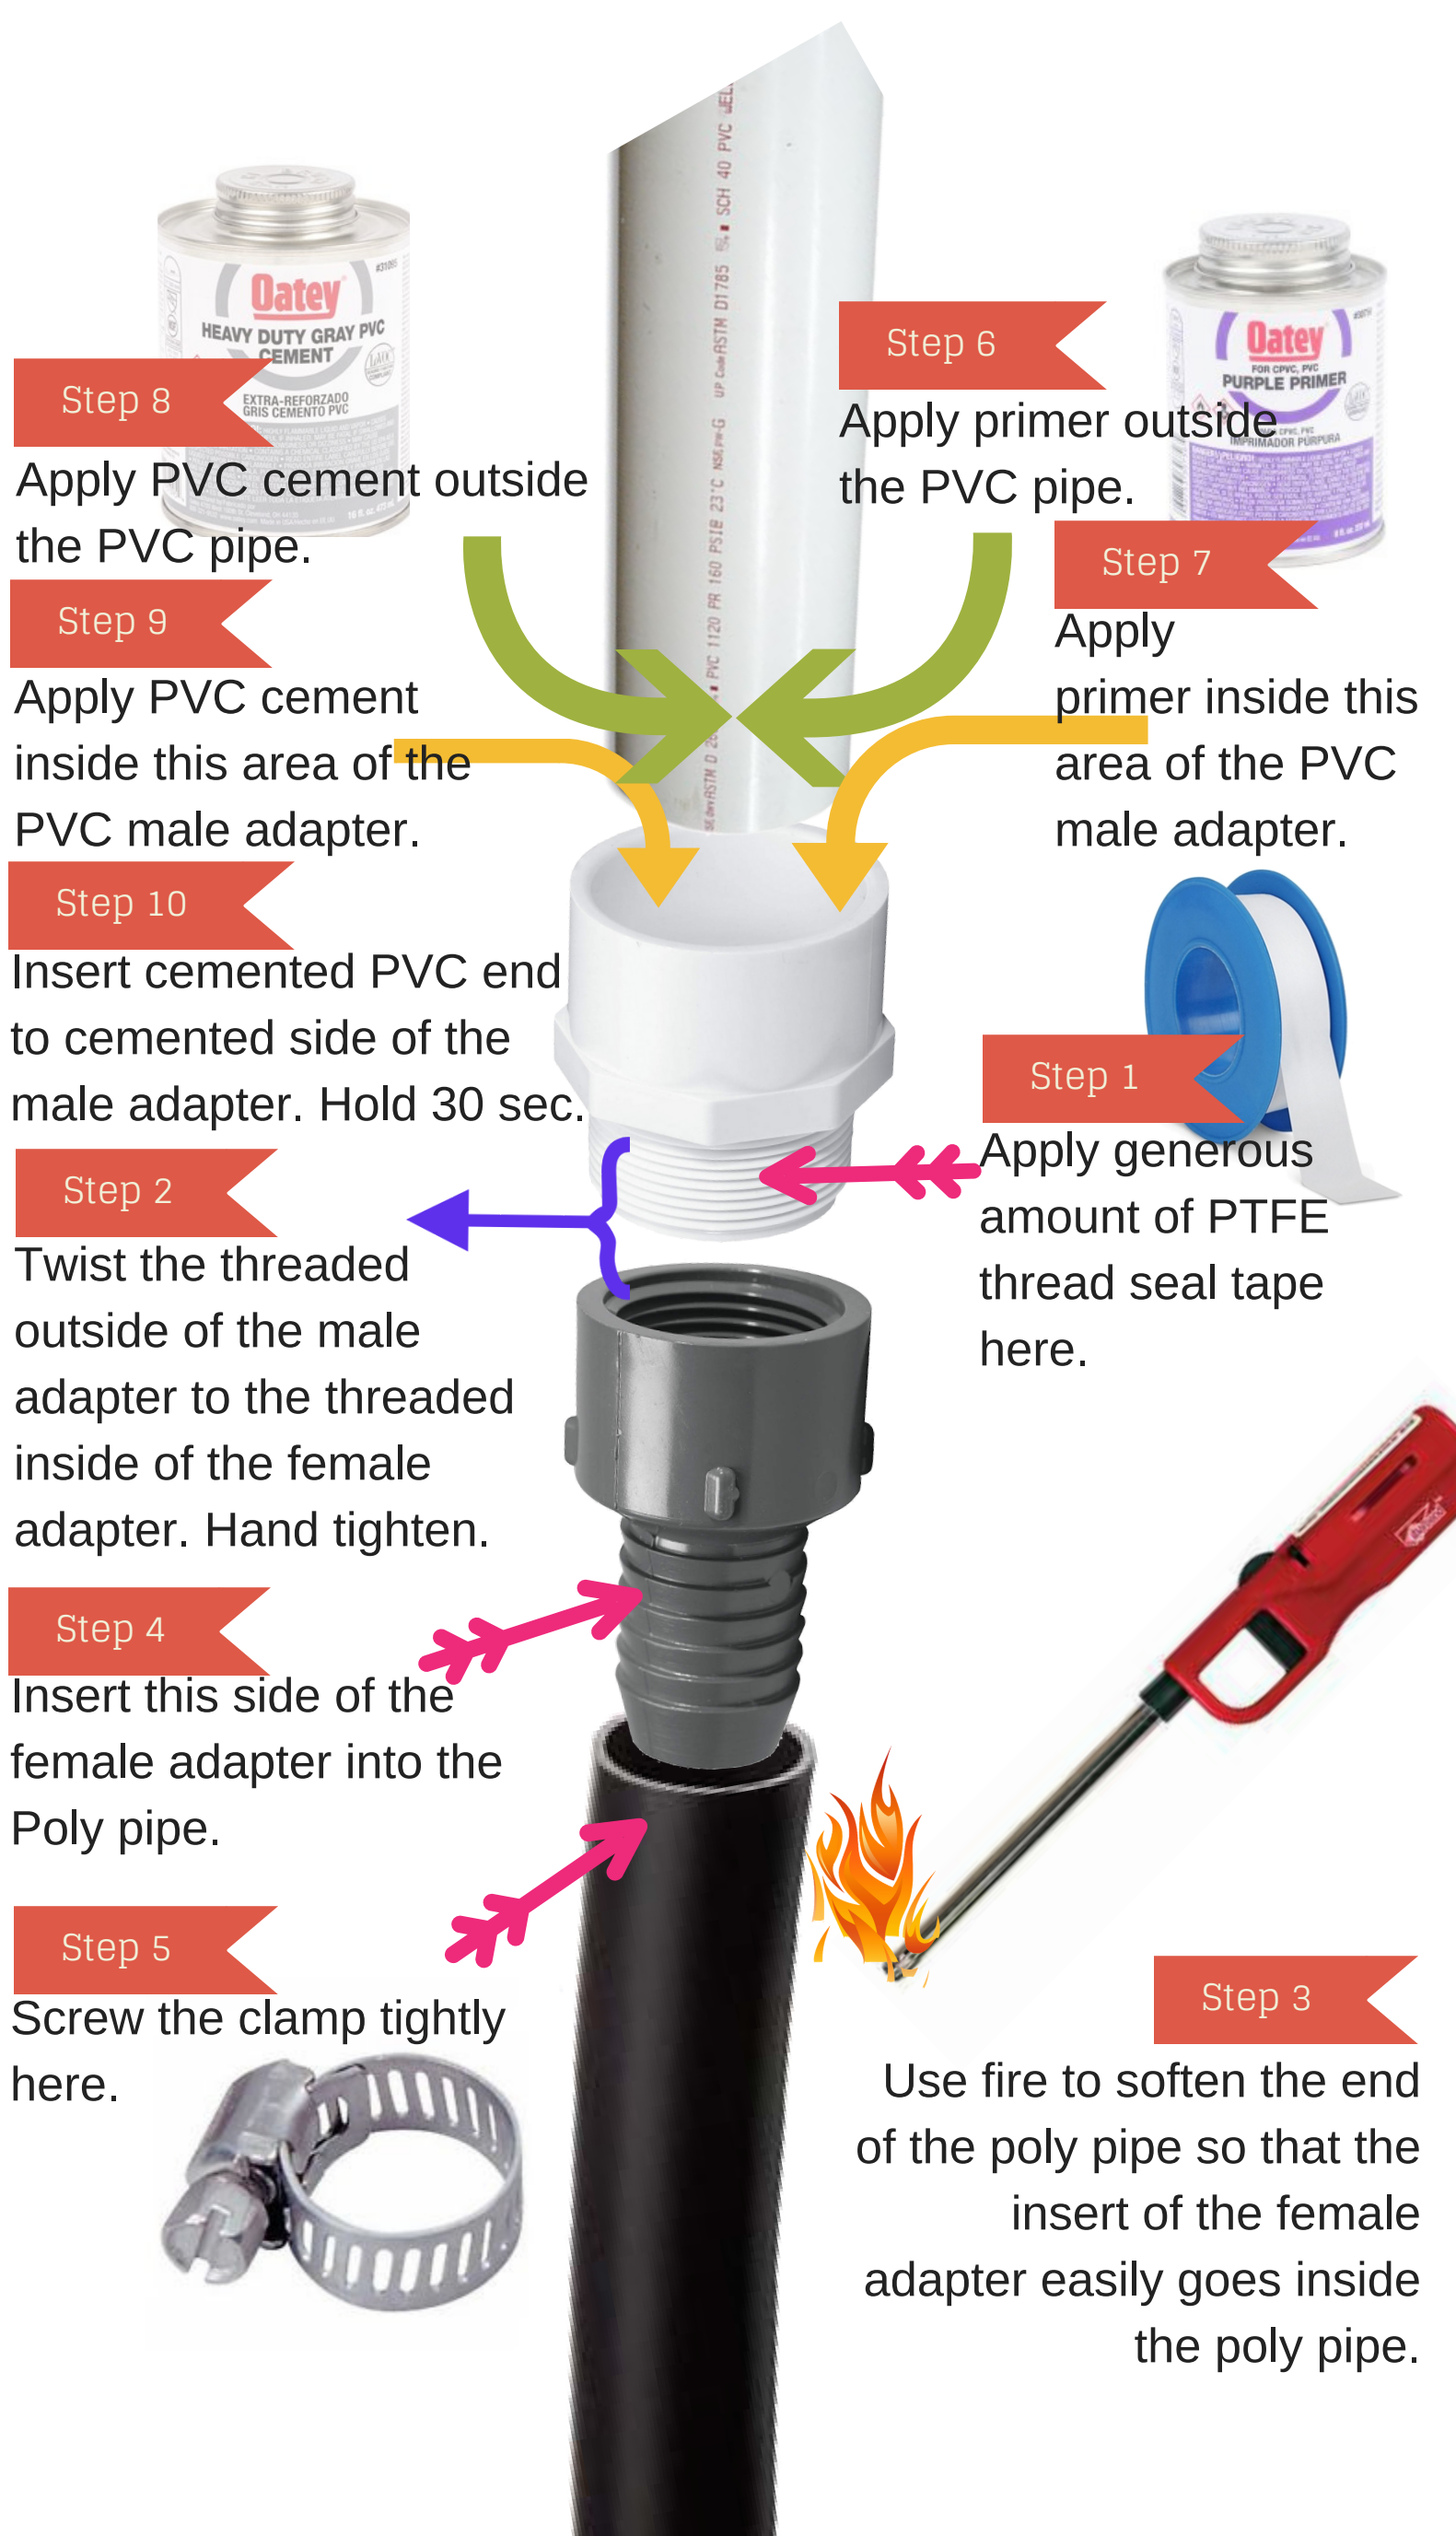

### Concluding remarks

Allow 15 minutes for handling strength. Allow around two hours time at temperatures above 65 degree F before testing the irrigation system.